


*Installation Guide for Flat
and Combination Curb Grates*

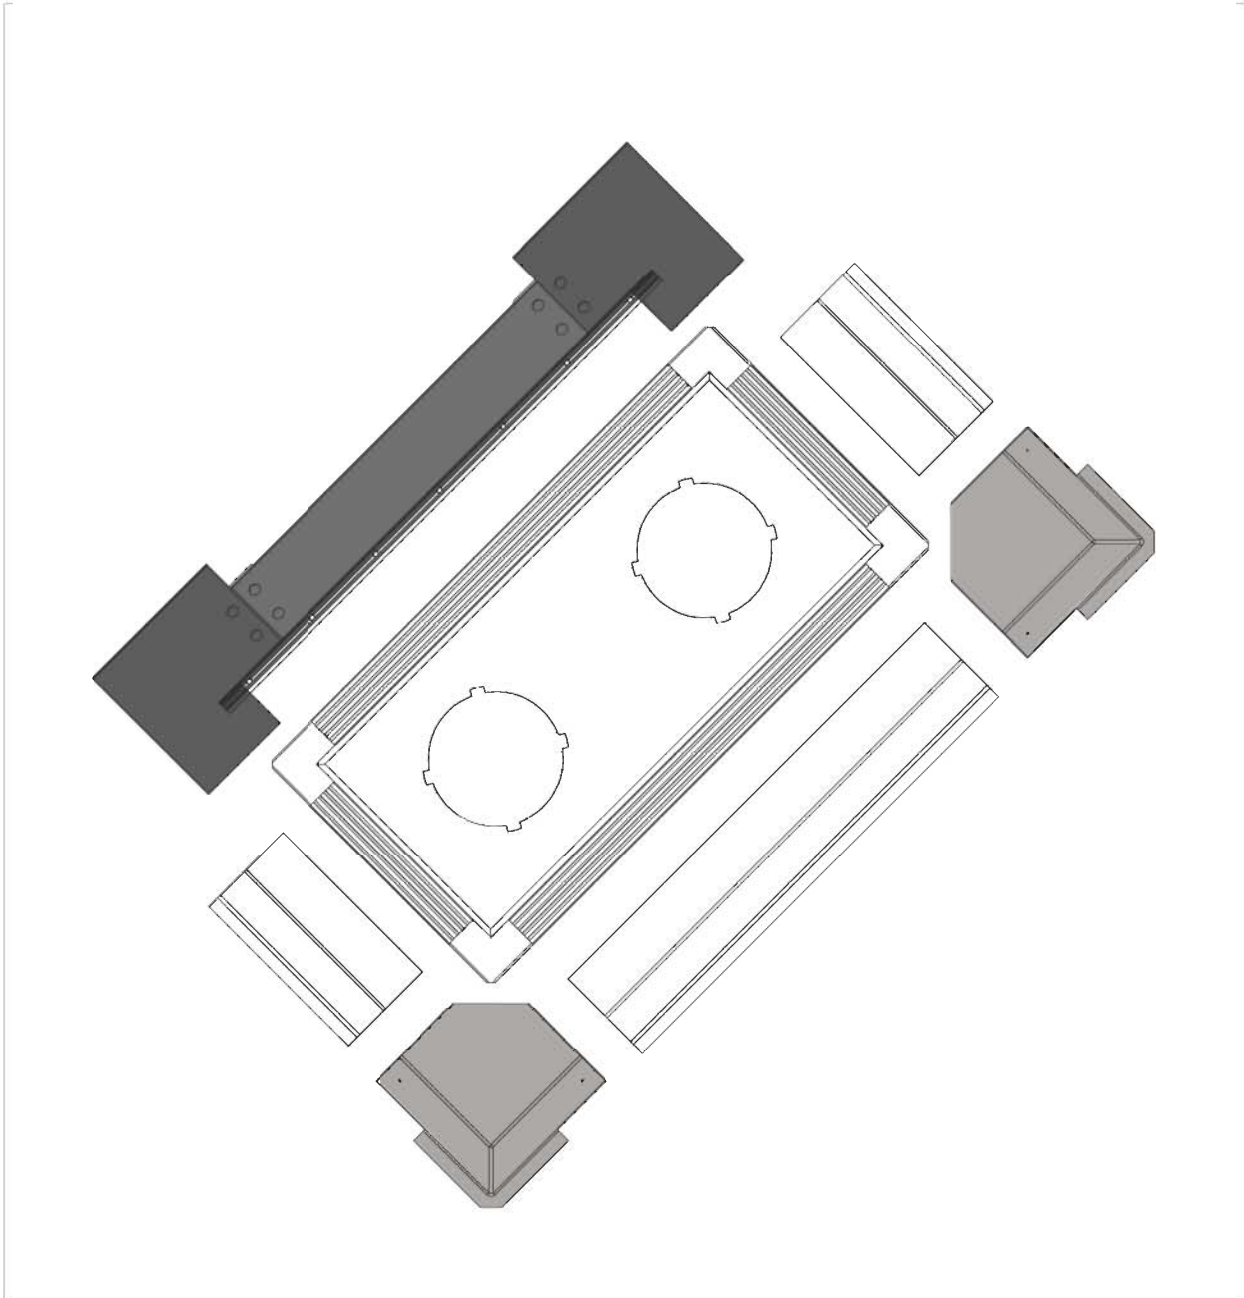

Installation Kit for flat grate

There are two types of components in the flat grate installation kit.

The Corner Piece





The Mounting Flange

In this installation kit you will find four corner pieces and four pieces of mounting flange, two long, two short pieces and fixing screws.

The first step is to slide on the two short end pieces of mounting flange at the length you need so that it rests on the lip of the catch basin frame.


The second step is to slide on the two long side pieces of mounting flange at the width you need so that it rests on the lip of the catch basin frame.

The third and final step is to screw the four plastic corners to the mounting flange.

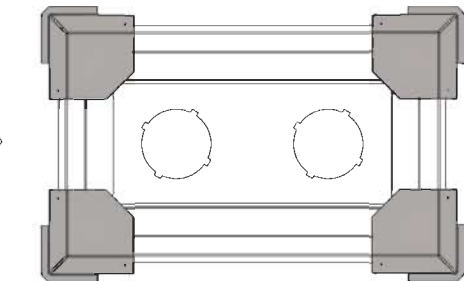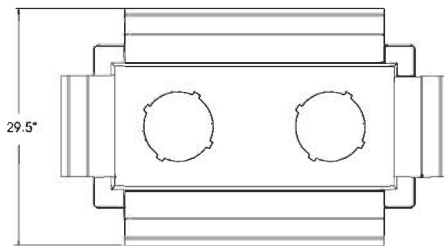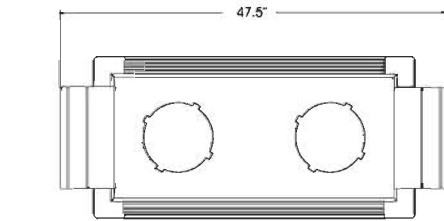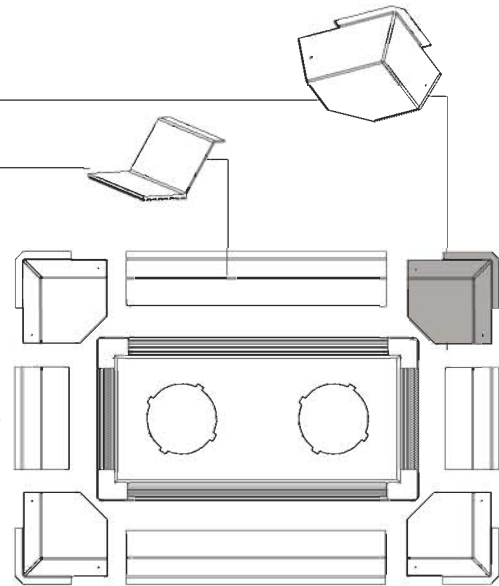


Installation Kit for combination curb grate


There are three types of components in the combination curb grate installation kit.

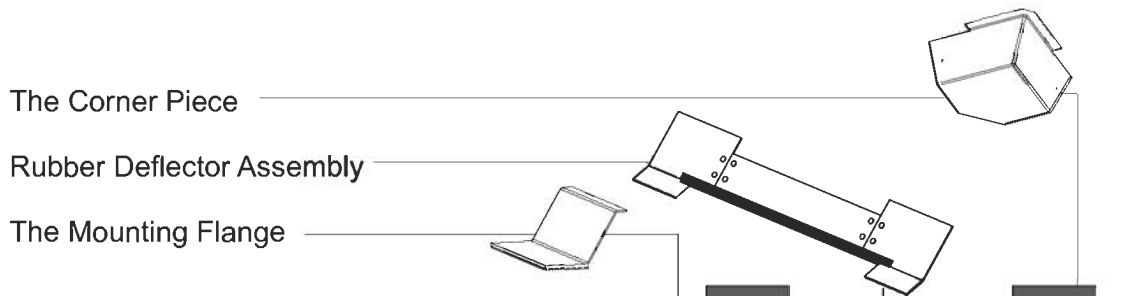


In this installation kit you will find two corner pieces and three pieces of mounting flange, one long, two short pieces a rubber deflector assembly and fixing screws.

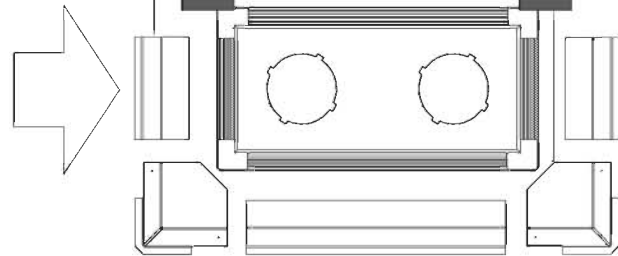


The first step is to slide on the two short end pieces of mounting flange at the length you need so that it rests on the lip of the catch basin frame.

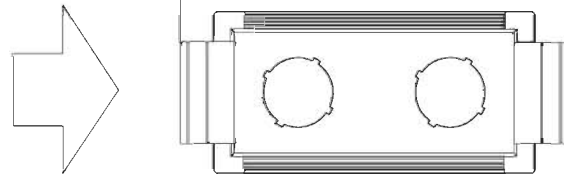

The second step is to slide on the long side piece of mounting flange and the rubber assembly at the width you need so that it rests on the lip of the catch basin frame.

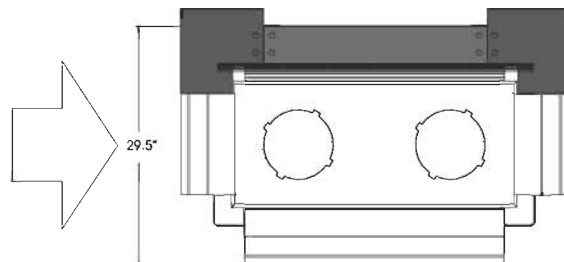

The third and final step is to screw the two plastic corners to the mounting flange.

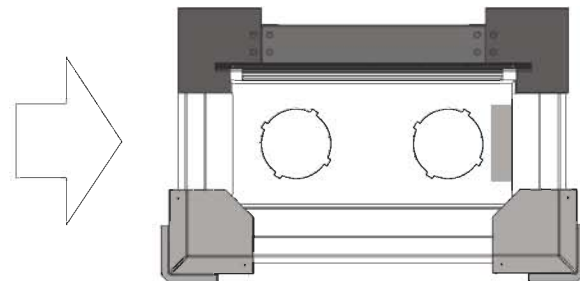

Installation Guide for catchbasin with curb opening

1

Remove the catchbasin cover using a backhoe or ergonomic grate lever. Using a wire brush remove debris from the catchbasin frame.



2

Measure the catchbasin frame for both length and for width.



3

Utilizing the dovetails, set the flanges and rubber deflector assembly for both the required length and width.



Installation Guide for catchbasin with curb opening

4

Install the unit by carefully fitting the rubber assembly into the curb opening and screw the corner pieces into the flange



5

Install the cartridges by lowering them into the cartridge location holes and secure them with a quarter turn in a clockwise direction.



6

Carefully replace the catchbasin grate ensuring that it is properly seated on the frame. The installation is now complete.





Modular Stormwater Catch Basin Filter System

Installation Guide for catchbasin

1

Remove the catchbasin cover using a backhoe or ergonomic grate lever. Using a wire brush remove debris from the catchbasin frame.



2

Measure the catchbasin frame for both length and for a width.



3

Utilizing the dovetails set the flanges for Both the required length and width.





Modular Stormwater Catch Basin Filter System

Installation Guide for catchbasin

4

Install the unit and screw the corner pieces into the flange material.



5

Install the cartridges by lowering them into the cartridge location holes and secure them with a quarter turn in a clockwise direction.



6

Carefully replace the catchbasin grate ensuring that it is properly seated on the frame. The installation is now complete.

